

ASPHALT > MARSHALL STABILITY

# MARSHALL STABILITY TESTING MACHINE

## (Automatic)

Code : A001A



*will be added soon ...*

### TECHNICAL SPECIFICATIONS

*will be added soon ...*

### ORDERING INFORMATION

| Item Name                             | Item Code |
|---------------------------------------|-----------|
| MARSHALL STABILITY TESTER - Automatic | A001A05XU |
| MARSHALL STABILITY TESTER - Load Ring | A001L05XU |
| MARSHALL STABILITY TESTER - Digital   | A001M05XU |

|                                                      |           |
|------------------------------------------------------|-----------|
| BREAKING HEAD for MARSHALL STABILITY TEST - 4"       | A001P001H |
| BREAKING HEAD for MARSHALL STABILITY TEST - 6"       | A001P002H |
| INDIRECT TENSILE STRENGTH APPARATUS (Lottman Method) | A001P003H |
| ELECTRONIC BOARD (PCB) for A001A05XU                 | A001P004H |
| SPARE LOAD/DEFORMATION INDICATOR for A001M           | A001P005H |
| SPARE MOTOR THREADED SHAFT for A001                  | A001P006H |
| SPARE MOTOR for A001                                 | A001P007H |
| SPARE GEARBOX for A001                               | A001P008H |